



Office of Elevator Safety

General Services Administration

Facilities and Utilities Management Division

201 West Flagler Street

Miami, Florida 33130-1510

Phone: (305)375-1577; Fax: (305)372-6367

June, 2005

Dear Elevator Owners and Managers:

Each season, I send out my reminder slips to all County facility managers to assist them in preparing their elevators for the hurricane season. Since we are now the regulatory agency for elevators Countywide, we are sharing this information with the public. This letter is posted to our web page and also can be requested by mail. We usually send out a short checklist each year to our County agencies, however perhaps a little more detail is in order, so let me elaborate on each of the points and illustrate some examples of why each item is important.

In our checklist we advise the following:

A) PRIOR TO HURRICANE SEASON (April and May):

1) Check the operation of all vents and openings in the machine room and hoistway walls to insure proper operation and prevent water leakage.

This should be a part of your regular routine maintenance to insure that your vents operate properly to achieve designed ventilation, and that they do not permit driving rain to blow through the vents. We also want to ensure that the doors, vents and other openings are properly caulked and sealed so as to prevent water leakage. Fire rated metal doors which are corroded, should be replaced. In addition to having lost their fire resistance, a corroded door may not possess the structural integrity necessary to withstand gale force winds.

2) Check all sump pumps, float switches and alarms to insure proper operation.

This process ought to be part of a regular P .M. schedule and needs no further explanation.

B) PREP ARING FOR HURRICANE (Hurricane Warning):

- 1) *Check all sump pumps, float switches and alarm in elevator pits.*

This is a procedure recommended in addition to your regular P.M. schedule. This should be performed when a hurricane warning has been declared. Conditions do change and equipment can fail when you need it most. During the "No-name Storm" of 2000, the County had very little pit flooding due to failed pumps, and those were the only units damaged.

- 2) *Close up all vents and openings in top of hoistway and machine room to prevent water from intruding.*

While this procedure appears obvious, it should be noted that adequate ventilation for the elevator machinery is necessary. If the machine room is air-conditioned you shouldn't have vents. If you depend on ambient ventilation (powered or passive) this should be done really at the very last stages of your facility preparation, as the equipment can heat up much faster than you might think.

Hoistway ventilation is not as critical and close-up can be performed early on. It is preferable to have a permanent means of preventing water from intruding this space installed in such a manner as will still allow ventilation. It should be noted that not all hoistway vents may be readily accessible and permanent covers or hoods should be designed and installed prior to hurricane season to prevent driving rain from entry. Since hoistway vents are at the top of the shaft, they may be readily accessible from the roof of the building. If not, a cover may be installed from the inside, either by your elevator contractor or properly qualified building maintenance personnel.

- 3) *Elevators that open to the atmosphere should have sandbags placed all along bottom of hoistway doors.*

Since this procedure would effectively render the elevator unusable, it is recommended that this procedure be the last preparatory act, prior to shutting the elevator off.

This procedure is necessary where the elevator entrances are open to the atmosphere such as in parking garages, housing facilities with open breezeways, pedestrian bridges and other specialized facilities such as the Metro Rail stations.

C) DURING HURRICANE:

1) Run elevator to center of hoistway and pull the main breaker in machine room (Not the main breaker located elsewhere).

This should actually be the very last thing you do during the warning phase, just before you evacuate the building. Buildings so designated as "hurricane safe", which will house some personnel, should perform this just before the winds rise above 45 MPH. I have recommended the middle of the hoistway as a compromise.

The best location is just below the top landing for most traction elevators to protect both the elevator, and the counterweight equipment. Except where there is a basement, then the traction elevator should be parked two floors below the top.

Hydraulic elevators should be parked at the top floor to minimize damage to the car equipment, unless the elevator entrances are open to the atmosphere, then the best place is the middle landing (or top for two stops) to best protect the piston.

Disconnecting the power serves three purposes:

- a) It prevents an unauthorized person from otherwise taking the elevator away from your intended parking area.
- b) It prevents severe damage to equipment caused by short circuits from wet circuitry. Usually once the equipment is dried out it can be quickly cleared and re-started by a competent mechanic; with little or no damage.
- c) The equipment will be saved from damage caused by voltage surges, spikes and dips resulting from lightning strikes and power line shorts due to wind.

2) Park elevators with doors closed.

Although this is fairly self-explanatory, there are several reasons:

- a) If windows break on the floor the elevator is parked you will prevent debris from entering the hoistway.
- b) On hydraulic elevators, it is normal to have some oil leakage around the jack packing. An elevator that sits for 24 or more hours may settle as much as a couple of inches, or more. An open door would only invite problems as you can imagine.
- c) We do not want anyone to get inside and close the doors manually and perhaps become inadvertently trapped.

3) Do not run elevator during hurricane.

Although this should be self evident, we occasionally hear about people who were trapped during the storm. These are usually either due to building management not having properly secured the elevator, or building management trying to effect emergency repairs to the building.

A case in point: During Hurricane Andrew one of our County building managers was riding the service elevator up to a floor with a load of plywood to secure some broken windows in one of our high rise facilities. Even though this was in the Downtown Miami area, we had significant high winds. The wind force coming down the elevator shaft was so strong that it stalled the elevator motor and blew a circuit breaker. Had the elevator not been near a floor where the trapped persons could have extricated themselves they would have been trapped, at a minimum 12 hours. It could have been longer, as we were unable to get service personnel to commence repairs until 3:00 p.m., a full 18 hours after the incident.

D) AFTER HURRICANE:

- 1) Inspect elevator pit, cab, machine room for indication of water.
(Do not energize main line breaker if water is found).*
- 2) If water is found, call your Elevator Contractor.*

We do not want to energize the main line power until we can determine whether or not the water poses a hazard to life or equipment. Obviously this is an instance in which good judgment is necessary on the part of building management. If there is any doubt, contact your elevator contractor.

Generally if the water encountered in the pit is minimal, and is not near any equipment in the pit, the elevator may be run. If water leaked under the door or through a vent in the elevator machine room, and there is no water on the equipment or signs of water having been on the equipment, then it may be safe to run the elevator. If water is in the cab and it did not leak in from above, the elevator may be run. If water conditions appear above the cab or on any part of the equipment do not run it until it can be properly evaluated.

Those buildings with basements need to take special precautions. Do not run the elevator at all, until you have checked the basement. A couple of police officers in Coral Gables almost lost their lives when they got in an elevator at the ground floor to go up in a building on an emergency call. The electrical system shorted out, and called the elevator to the basement, where the doors automatically opened, flooding the car. Luckily they were able to swim to safety. Emergency personnel in New York were not so lucky. Drowning in an elevator happens all over the world, and the victims are helpless once the elevator has hit the water.

- 3) Do not attempt to start elevator (or call for service) if power is out.*

Obviously if you do not have electricity you don't want to call your elevator contractor while you are still without power. However, there may be some condition where you still don't want to call. If your building has a generator and the elevators (or some of them) are not connected to the generator, you don't want to call until the generator shuts off and all normal power is restored.

The important issue here is all normal power; there may be a condition where some lights are on in the building, and some are not. This may be caused by the loss of one or more phases, or "legs", of three-phase power. Without all three phases in our commercial buildings, the elevators will not run. Some elevators may not be equipped with a phase or voltage monitor and trying to start it will result in damage to the equipment, which would not be covered by our maintenance agreements. Likewise, if you call for service and there is no power, you will pay extra for the trouble call.

E) SPECIAL CONSIDERATIONS:

1) Usage of equipment and availability of equipment for the disabled.

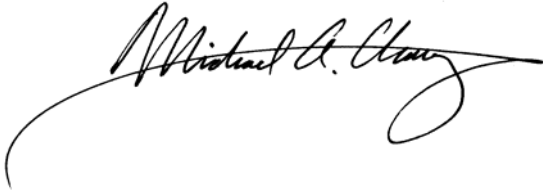
Obviously we need to take into account the unavailability of equipment for the movement of the disabled after it has been shut down. If necessary, advance plans should be implemented to move the disabled to a designated shelter. The equipment should not be used by anyone during a hurricane for their personal safety. The ADA requires reasonable accommodation for the disabled, that does not mean endangering them, or allowing them or anyone else to place themselves in peril.

These are just a few examples. We all will have to rely on our good judgment and common sense. If you aren't sure, ask your service contractor before asking them to send a mechanic.

In the meantime if you have any questions, feel free to call us at (305) 349-6033 or write me.

Good luck!

Miami-Dade County

A handwritten signature in black ink, reading "Michael A. Chavez". The signature is fluid and cursive, with a long horizontal line extending from the end of the name.

Michael A. Chavez
Manager, Office of Elevator Safety